Operating



Remote Viewing

Eco16 can use either the web browser or NetVu ObserVer software to allow images to be viewed remotely across the network. The NetVu ObserVer software can be downloaded from the unit. To download the software:

- 1. Open your web browser.
- 2. Enter the IP address of the Eco16 in the address bar, e.g. 192.168.3.3, remove any 0's that are configured in the units menu.
- 3. The Eco16 home page will be displayed, select the Download option, select the Viewer Software option and NetVu ObserVer executable link.
- 4. Follow the on-screen prompts to install the software on the PC.

Note: The web configuration manual and the viewing application manual can also be downloaded from the unit from this page.

The Home page of the web interface also provides access to viewing images from the unit. Select the Live tab from the home page and select a camera input to view video. Refer to the Web Interface manual (on the unit) for web control and configuration.

Playback

- To playback images tap (to rewind to the desired location and then press). Press play for review mode or press and hold play for the GOTO option.
- When in playback, tap *(or)* to search rewind or fast forward, multiple taps will increase the • search speed.
- Tap II to pause the current image. Tapping ≪or >> whilst paused will frame advance or rewind.

Goto Time

Press and hold > (GOTO) to play back from a specific time or date.

Enter the required time and date, and press .

TIP: The images are updated in the background automatically when the time and date is adjusted.

Exit Playback

Tap the **MODE/MENU** button to exit playback mode, the Play LED will go out.

Using the Event Log

Alarms and activity detection are tagged and stored in the event log for easy retrieval. Each event is labelled with event type (alarm or activity), its camera title, time, and date. To view an event from the event log:

- . In Live mode with control of the Main Monitor tap the event button to display the event log.
- Use \hat{T} and \hat{V} to select the event required, the selected event is displayed in the preview window.
- Tap ▶ to view the event in full screen.
- Tap MODE/MENU to exit the Event log.

Event Search Filter

It is possible to filter the search by selecting a particular function (alarm, activity or system) within the time and date and on a specific camera. To enter this option, with the Event Log displayed press the **EVENT** button again. This will display the Event Search Filter menu.

TIP: You can enter this menu by pressing and holding the **EVENT** button.

Viewing Single Cameras

Full



Pressing a camera button will display a full screen image of that camera.

Zooming an image

Press the same camera button to toggle zoom on and off. When zoom is enabled, use $\Leftrightarrow \Rightarrow \uparrow \downarrow$ to scroll around the image Freezing an image

Double tap the camera button or press the pause button toggle freeze frame on or off.

Viewing Multiple Cameras

Picture in Picture Í



Press the **PIP** button to toggle the main and PIP image.

Press and hold the **PIP** button to edit the display, use $\Leftrightarrow \Rightarrow \hat{u}$ to select the segment. press the required camera button to fill that segment. Press MODE/MENU to exit.

Quad Ē



Press the QUAD button to switch to quad display.

Press and hold the **QUAD** button to edit the display, use $\ominus \Rightarrow \oplus \oplus$ to select the segment, press the required camera button to fill that segment. Press MODE/MENU to exit.



Press the **Multiscreen** button to toggle between a 9-way, 6-Way, 4+3 display, 12+1 display 8+2 display or 16 Way.

Press and hold the **Multiscreen** button to edit the display, use $\Leftrightarrow \Rightarrow \hat{u} \Downarrow$ to select the segment, press the required camera button to fill that segment. Press MODE/MENU to exit.

Sequencing Cameras

Sequence

Press the Sequence button to toggle the main monitor sequence on or off.



Use the camera buttons to include or remove cameras from the sequence. Press MODE/MENU to exit.

Note: The spot monitor sequence can only be activated or edited in spot mode.

Multiscreen

é 🖵

v

Viewing Cameras on the Spot Monitor

Press the **MODE/MENU** button to toggle 'spot' mode, indicated on the main monitor and the front panel LED. Press a camera button to display that camera on the spot monitor or tap the sequence button to sequence the cameras.

Copying Images to CD

Using the Copy Images Menu

- 1. Insert a blank CDR or pre-formatted CD-RW into the CD drive of the unit.
- 2. Press and hold the **COPY** button to display the following screen.
- 3. Use the cursor buttons to change the time to copy 'to and from'.

Copy In	nages
Copy destination Copy from time Copy to time Watermarking Unprotect on Archive	CD-R CD0: 15:41:00 01/12/2005 15:45:00 01/12/2005 Enabled Disabled
Copy destination	This is the name of the internal CD drive of the unit.
Copy from time	Select the time you wish to copy images from.
Copy to time	Select the time you wish to copy images to.
Сору	Select 'All cameras' or individual cameras to copy using the camera buttons (filled boxes are selected cameras, unfilled boxes are not selected).
Watermarking	A unique watermark can be added to the images as it is copied to it's destination.
Unprotect on archive	If an image has been manually or automatically protected it is possible to remove this protect when the image is archived, to ensure archived images will be over-written.
Once the 'Copy images' p	age is complete, press the menu button to display the following menu:

Disk Archive List							
Disk t Media	ype i usage	CD-R Empty —			Capacity (MB)	: 702 - 8% Full	
	Fr	om		1E / E	To		
	10:41	07/12/05		15:45	07/12/05		
Next	15:47	07/12/05	to	15:49	07/12/05		
Add	Next	Clear Lis	t	Archive	Archive &	Verify	

This menu displays the disk archive list with the images listed that are to be copied to the CD, the 'CD Use' bar indicates the how much space is available on the CD, once it reaches 100% no more images can be added to the archive.

Add next	Add the selected times to the archive list.		
Clear list	Removes all entries from the list.		
Archive	This will start the archive process to the CD.		
Archive& Verify	If you want to verify archiving has been successful, select this option.		

To select any of the above options, highlight the option and tap $\ensuremath{\mathsf{MODE}}/\ensuremath{\mathsf{MENU}}$. To add images to the CD:

- 1. Select 'Add next' and press the MODE/MENU button to add the displayed time to the list.
- 3. Once all the required images are added to the archive list, select 'Archive' or 'Archive & Verify' and press the **MODE/MENU** button to create the CD.
- 4. "Please wait archiving in process" will be displayed, it will also show the percentage complete of the archive process
- 5. Press and hold the MODE/MENU button to exit the Disk Archive List page.

Using the Copy option during Playback

It is possible to copy playback images to the Disk Archive List while reviewing the images. This provides the Operator with an simple process of selecting images that are of interest to be automatically copied to the Disk Archive List for burning to a CD.

- 1. Press to return to the start of the recorded files that are to be copied.
- 2 Press ▶ and immediately press the **COPY** key, a message will appear to say the images are being copied.
- 3. When the end of the recorded images are reached press the **COPY** key again to stop the copy process.
- 4. Confirm the files have been added to the archive list by selecting the Disk Archive List menu.

Using the Copy option within Event Log

Within the Event Log it is possible to highlight an event as copy this to the Disk Archive List for copying to a CD.

- 1. Press the **EVENT** button to display the Event Log screen.
- 2. Using the \hat{U} keys to highlight the event to be copied.
- 3. Press the COPY key, a message will be displayed to say the event has been copied.
- 4 Confirm the files have been added to the archive list by selecting the Disk Archive List menu.